


# Operating Instructions

## C-VLR 62 | 122 Active cooling

### Vacuum pump

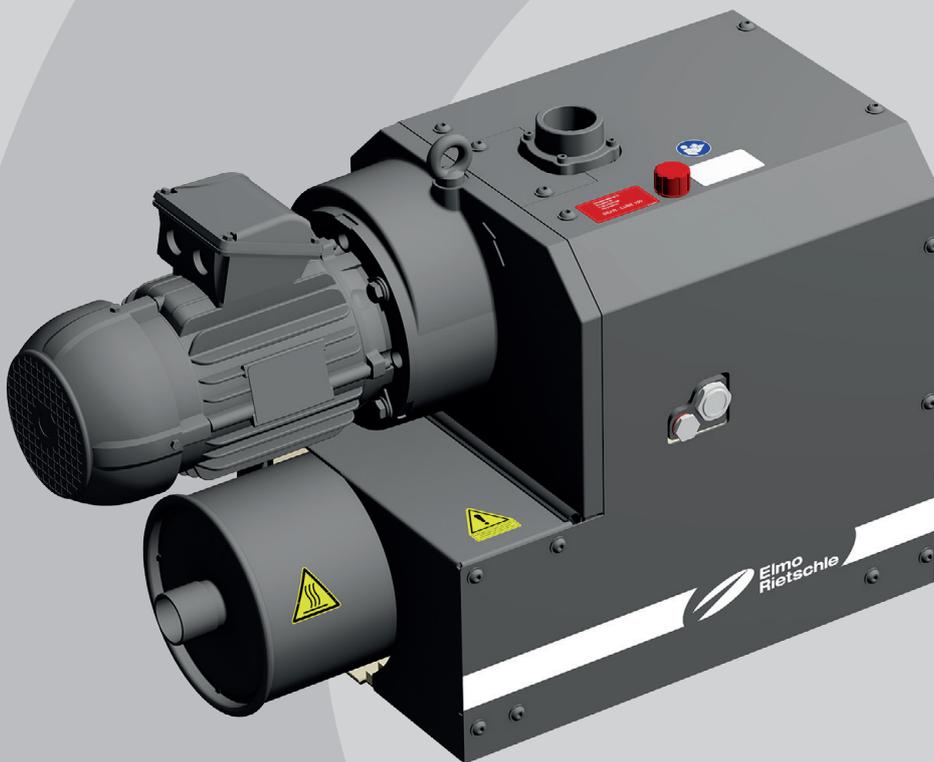

C-Serie  
C-Series

Klaue  
Claw



**Table of contents**

<b>1</b>	<b>Foreword</b> .....	<b>4</b>
1.1	Principles .....	4
1.2	Target group .....	4
1.3	Supplier documentation and accompanying documents .....	4
1.4	Directives, standards, laws .....	4
1.5	Copyright .....	4
1.6	Disclaimer .....	5
1.7	Specialist terms and meaning .....	5
<b>2</b>	<b>Safety</b> .....	<b>6</b>
2.1	General .....	6
2.2	Labelling of warnings .....	6
2.3	Symbols and meaning .....	6
2.4	Intended use .....	8
2.5	Inadmissible operating modes .....	8
2.6	Personnel qualification and training .....	8
2.7	Personal protective equipment .....	9
2.8	Safety-conscious working .....	9
2.9	Responsibilities of the user .....	10
2.10	Hazardous substances .....	10
	2.10.1 Conveying media .....	10
	2.10.2 Auxiliary materials and lubricant .....	10
2.11	Safety equipment, monitored functions .....	11
2.12	Emergency Stop / Emergency Off .....	11
2.13	Protection of environment .....	11
<b>3</b>	<b>Transport and storage</b> .....	<b>12</b>
3.1	Transport .....	12
	3.1.1 Unpack and check the as-delivered condition .....	12
	3.1.2 Lift and transport .....	12
3.2	Storage .....	13
	3.2.1 Ambient conditions during storage .....	13
<b>4</b>	<b>Product overview and functioning</b> .....	<b>14</b>
4.1	Product overview C-VLR 62 .....	14
4.2	Product overview C-VLR 122 .....	15
4.3	Product overview vacuum pump with frequency converter .....	16
4.4	Data plate .....	17
4.5	Description .....	18
4.6	Fields of application .....	18
4.7	Accessories .....	18
	4.7.1 Intake filter .....	18
	4.7.2 Vacuum relief valve .....	18
<b>5</b>	<b>Installation</b> .....	<b>19</b>
5.1	Preparation of installation .....	19
5.2	Installation .....	19
5.3	Connection of pipes .....	20
5.4	Check lubricating oil .....	20

5.5	Connect to the energy supply network . . . . .	21
5.5.1	Connect motor, machine without frequency converter . . . . .	21
5.5.2	Connect motor, machine with frequency converter . . . . .	22
<b>6</b>	<b>Commissioning and decommissioning . . . . .</b>	<b>23</b>
6.1	Start-up . . . . .	23
6.1.1	Installation check . . . . .	24
6.1.2	Check the rotation direction . . . . .	24
6.2	Operation . . . . .	24
6.2.1	Discharge condensate . . . . .	24
6.3	Decommissioning. . . . .	25
6.3.1	Decommissioning of the machine . . . . .	25
6.3.2	Storing the machine . . . . .	25
6.4	Recommissioning. . . . .	25
<b>7</b>	<b>Maintenance and repair. . . . .</b>	<b>26</b>
7.1	Ensure operational safety. . . . .	26
7.2	Maintenance table . . . . .	27
7.3	Preparing maintenance works . . . . .	27
7.4	Clean vacuum pump . . . . .	27
7.5	Lubricating Oil . . . . .	28
7.5.1	Check/refill oil level. . . . .	29
7.5.2	Oil change. . . . .	29
7.6	Air filter. . . . .	29
7.6.1	Mesh filter . . . . .	30
7.6.2	Intake filter (accessories) . . . . .	30
7.7	Motor and coupling . . . . .	31
7.7.1	Motor . . . . .	31
7.7.2	Coupling . . . . .	31
7.8	Frequency converter . . . . .	32
7.9	Repair / service . . . . .	32
7.10	Spare parts. . . . .	33
<b>8</b>	<b>Errors. . . . .</b>	<b>34</b>
<b>9</b>	<b>Disassembly and disposal. . . . .</b>	<b>36</b>
9.1	Disassembly. . . . .	36
9.2	Disposal . . . . .	36
<b>10</b>	<b>Technical Data . . . . .</b>	<b>37</b>
10.1	Variants without frequency converter . . . . .	37
10.2	Variants with frequency converter . . . . .	38

# 1 Foreword

## 1.1 Principles

These Operating Instructions:

- Are a part of the following contact-free, running claw vacuum pumps:
  - C-VLR 62 and C-VLR 122 with active cooling
  - C-VLR 62 and C-VLR 122 with active cooling and frequency converter (variants Fxxx)
- Describe how to use these pumps safely and properly in all life phases and they apply to all responsible persons
- Include general information on installation, commissioning, maintenance and inspection
- Must be available at the place of application.

Figures presented in these Operating Instructions serve for better understanding and can deviate from the components installed. This does not influence the validity of the details set out in the instructions.

## 1.2 Target group

Target group for these Operating Instructions are the technically trained specialist personnel which have been qualified by appropriate training and instruction.

## 1.3 Supplier documentation and accompanying documents

Document	Contents	No.
Supplier documentation	Operating Instructions	BA 882-31-AC
	Declaration of Conformity	C 0080
	Declaration of no-objection	7.7025.003.17
	Connection diagram (in the cover of the frequency converter)	-
Spare parts list	Spare parts documents	E 882-31
Data sheet	Technical data and characteristic curves	D 882-31 D 882-31-FU
	Technical Data - Frequency converter	610.00260.02.840
Info sheet	Storage guideline for lubricants	I 100
	Storage guideline for machines	I 150
Operating Instructions	Operating instructions frequency converter INVEOR M	DOC02298769-0004

## 1.4 Directives, standards, laws

See Declaration of Conformity.

## 1.5 Copyright

These Operating Instructions are intended for the customer's internal purposes.

Unless expressly permitted, passing on to third parties, copying of these documents, except for internal purposes, as well as using and providing their contents to third parties, even in excerpts, is prohibited.

Contraventions will lead to claims for damages.

## 1.6 Disclaimer

Please note that we cannot accept any liability for damages arising from failure to observe the instructions. Gardner Denver Schopfheim GmbH does not assume liability for the following cases:

- Not intended use
- Not complying with these instructions
- Nonobservance of all documents and specifications belonging to the overall documentation
- Erection, operation, maintenance and repair by insufficiently qualified staff
- Modification or removing of the part or serial number
- Using spare parts that have not been approved by **Gardner Denver Schopfheim GmbH**
- Unauthorised modifications to the machine or the accessories supplied by **Gardner Denver Schopfheim GmbH**

Please, also consider that repairs are only allowed to be done by authorised workshops using original spare parts; otherwise our guarantee will expire.

## 1.7 Specialist terms and meaning

Term	Explanation
Machine	Pump and motor combination ready for connection
Motor	Pump drive motor
Vacuum pump	Machine for creating underpressure (vacuum)
Frequency converter	A frequency converter allows an infinitely variable control of the speed.
Claw	Design or operating principle of the machine
Suction capacity	Vacuum pump, volumetric flow related to the condition in the inlet connection, specified in m <sup>3</sup> /h
Final pressure (abs.)	The maximum vacuum that a pump reaches while the inlet opening is closed, displayed as absolute pressure in mbar (abs.)
Permanent vacuum	Vacuum or the inlet pressure range, at which the pump operates in continuous operation. The permanent vacuum or inlet pressure is $\geq$ than the final vacuum and $<$ than the atmospheric pressure.
Noise emission	Noise emitted at a specific loading state indicated as a numeric value, sound pressure level dB(A) as per EN ISO 3744.

Abbreviation	Meaning
Fig.	Figure
Tab.	Table
C-VLR	Model description of the vacuum pump
CD	Pump in standard design
XD	Pump with corrosion-protective coating
FC	Frequency converter

## 2 Safety

The manufacturer is not responsible for damage due to non-observance of the whole documentation.

### 2.1 General

These operating instructions contain basic instructions for installation, commissioning, maintenance and inspection work which must be obeyed to ensure the safe operation of the machine and prevent physical and material damage.

Observe the safety instructions in all chapters.

The operating instructions must be read by the responsible technical personnel / user before installing and commissioning and must be fully understood. The contents of the operating instructions must always be available on site for the technical personnel/user. Instructions attached directly to the machine must be obeyed and must always remain legible. For example, this applies:

- Symbols for connections
- Data plate and motor data plate
- Information signs and warning plates

The data plates on the vacuum pump may not be removed, even if the machine is resold. For all queries about the product, please always quote the serial number.

The user is responsible for observing local regulations.

### 2.2 Labelling of warnings

Warning	Danger level
 <b>DANGER</b>	...warns of a hazardous situation, which will lead to death or life-threatening injuries if not avoided.
 <b>WARNING</b>	...warns of a potentially dangerous situation, which can lead to death or serious injuries if not avoided.
 <b>CAUTION</b>	...warns of a hazardous situation, which can cause slight or medium personal injuries if not avoided.
<b>NOTICE</b>	...warns of a situation that can cause damages to or destruction of material assets if not avoided.

### 2.3 Symbols and meaning

Symbol	Explanation
	Instructions, action
a), b),...	Instructions in several steps
	Results
	Reference

Symbol	Explanation
<p>Warning signs</p> 	<p>Obey all safety instructions with this symbol in order to avoid injury or death.</p> <p>Warns of potential risk of injury</p> <p>Warns of electrical voltage</p> <p>Warns of suspended loads</p> <p>Warns of hot surface</p>
<p>Mandatory signs</p> 	<p>Obey all instructions with this symbol in order to avoid injury or death.</p> <p>Observe the Operating Instructions</p> <p>Wear eye protection</p> <p>Wear protective gloves</p> <p>Wear safety shoes</p> <p>Wear ear protection</p> <p>Use a dust mask</p> <p>Disconnect the plant and secure it against unexpected restart</p> <p>Information, note</p> <p>Protection of environment</p>

### 2.4 Intended use

The machine is suitable for conveying the following media:

- Standard model:  
All non-explosive, non-combustible, non-aggressive and non-poisonous dry gases and gas-air mixtures
- XD model:  
All non-explosive, non-combustible, non-aggressive and non-poisonous, damp gases, and gas-air mixtures

The machine must only be operated in such areas as are described in the operating instructions:

- Only operate the machine in technically perfect condition
- The machine must only be operated at an ambient temperature and inlet temperature of between 5 and 40 °C  
Please contact us for temperatures outside this range
- The permissible back pressure may not be exceeded  
Maximum permissible back pressure: + 50 mbar
- The machine is only permitted to be operated within the speed range and frequency range that is specified on the data plate of the frequency converter

Any use extending beyond this use is seen as not in accordance with the intended use.

The intended use also includes the compliance with the operating data and operating agents specified in the operating instructions, the listed maintenance works, as well as the details in the documentation issued by the manufacturers of components and attachments.

If used under critical conditions and/or in case of any doubts, please contact the manufacturer. Non-observance can cause machine failures.

### 2.5 Inadmissible operating modes

- Extracting, conveying and compressing of explosive, inflammable, aggressive or poisonous media, e.g. dust as per ATEX zone 20-22, solvents as well as gaseous oxygen and other oxidation agents, water vapour, water vapour (does not apply to the XD model), liquids or solids
- Erection and operation in potentially explosive environment (explosive gas/vapour/mist-air mixtures or dust-air mixtures or hybrid mixtures of air and flammable substances)
- Using the machine in non-commercial plants unless the necessary precautions and protective measures are taken in the plant
- Operation of the machine when it is only partially assembled
- Using the machine in areas with ionising radiation
- Back pressures on the outlet side: > +50 mbar
- Modifications to machine and accessories
- Changes of the basic settings of the frequency converter
- Operation by not or not sufficiently qualified personnel

### 2.6 Personnel qualification and training

All works are only allowed to be done by qualified and trained specialist personnel of legal age. Unauthorised persons are not allowed to stay within the operating area and must be prevented from entering operating rooms by suitable measures.

- Ensure that people entrusted with working on the machine have read and understood these operating instructions before starting work, particularly the safety instructions for installation, commissioning, maintenance and inspection work
- Responsibilities, competences and monitoring of personnel must be regulated by the operating company.

- The following works are only allowed to be done by technical specialist personnel, who have been trained and instructed for the works assigned:
  - Transport only by forwarding agents
  - Erection, commissioning, maintenance and inspection works, as well as troubleshooting by technical specialist personnel (e.g. locksmith, mechanics)
  - Works on the electrical system are only allowed to be done by electricians
- Personnel to be trained and laypersons may only carry out work on the machine when under the supervision of authorised specialist personnel and must be instructed about possible hazards in a safety instruction.

**Specialist personnel:**

Persons that can evaluate work assigned to them and evaluate possible risks as a result of their training, knowledge and experience as well as the applicable regulations.

**Qualified electrician:**

Specialist personnel that has obtained an electrotechnical specialist education and is familiar with work for setting up, operation and maintenance of electrical systems and operating material.

**Unauthorised persons:**

Unauthorised persons are persons who cannot appropriately prove that they are qualified, trained, or instructed for the works on the compressor. In addition, those persons shall be seen as unauthorised who, due to their physical, cognitive, and health abilities, are not able to recognise hazards caused by the vacuum pump.

**2.7 Personal protective equipment**

The user must make sure that the required protective clothing and protective equipment is available on the plant and used by the personnel. The national legal provisions and the national regulations for industrial safety must be observed.

Recommended protective equipment:



Wear eye protection



Wear protective gloves



Wear safety shoes



Wear ear protection

**2.8 Safety-conscious working**

The following safety regulations apply in addition to the safety instructions and intended use listed in these instructions:

- Accident prevention regulations, safety and operating regulations
- Standards and laws in force
- Hot parts of the machine must not be accessible during operation or must be fitted with a guard
- Persons must not be endangered by the free extraction or discharge of pumped media
- Risks arising from electrical energy must be eliminated
- The machine must not come into contact with flammable materials.  
Risk of fire due to hot surfaces, output of hot pumped media or cooling air

### 2.9 Responsibilities of the user

During the whole operating period of the machine, the operating company is obliged to prove that the limits have been met and the required maintenance and inspection works have been performed.

The user must ensure that:

- All works for installation, commissioning and maintenance are carried out by authorised and qualified specialist personnel, who gained enough information by an in-depth study of the operating instructions
- All works on electrical equipment are done by an electrician in compliance with the regulations for electrical installations
- The Operating Instructions are always available at the site of operation of the machine for the whole life phase
- All safety instructions and signs on the vacuum pump are always complete and legible
- The operating and maintenance personnel take note of all safety instructions - especially of information provided in these Operating Instructions - and observe them
- The personal protective equipment is available and is used by the personnel
- All safety-relevant regulations are met
- Unauthorised persons cannot enter the operating site
- Fire warning and firefighting possibilities have been installed and are active
- These Operating Instructions shall be amended by working instructions, as well as the duties to supervise and report. With this they shall consider the operational distinctions. Among others, it refers to instructions referring to:
  - Organization of work
  - Work procedures
  - Specialist personnel assigned

In the event of accidents caused by the vacuum pump notify the Gardner Denver Schopfheim GmbH. Please find contact data on the back page.

### 2.10 Hazardous substances

#### 2.10.1 Conveying media

Machinery that may have contact to hazardous substances can cause serious burns, cauterisation or poisoning during disassembly, maintenance and repair work.

- Each time before using our services, it is necessary for reasons of occupational safety and environmental protection to indicate and declare hazardous substances on or in the plant.
- Send the completed and signed declaration of no objection back to Gardner Denver Schopfheim. If no declaration has been sent, we must assume that the plant is free from such substances. In case of doubt, our service department reserves the right to reject the acceptance until the safety has been determined without doubt.

#### 2.10.2 Auxiliary materials and lubricant

Incorrect auxiliary materials and lubricants may decompose at high temperatures. The resulting vapours may be harmful to health and cause fires.

- Use exclusively the recommended auxiliary materials and lubricants
- Observe the oil recommendation sign on the machine
- Observe the safety data sheets of the substances used
- Ensure proper use
- Observe the maintenance intervals

### 2.11 Safety equipment, monitored functions

Missing or non-functional safety equipment may lead to dangerous operating states and thus result in life-threatening injuries.

- Do not modify or bypass safety equipment and safety functions
- Check the function at regular intervals

### 2.12 Emergency Stop / Emergency Off

Missing safety equipment may lead to hazardous operating states. This can result in severe to mortal injury.

- The machine does not have its own Emergency Stop or Emergency Off. This **must** be implemented by the user, for instance, by integration of the machine in the user's safety concept.

### 2.13 Protection of environment

Environmental damage may be caused by the incorrect disposal of operating material and materials. For questions about environmental protection as well as national regulations, please consult your local disposal company.

- All operating materials as well as all gases, vapours or liquids, e.g. lubricating oil escaping during operation and maintenance must be collected and disposed of in an environmentally friendly manner.

### 3 Transport and storage

#### 3.1 Transport

**! WARNING**



**Death by falling down or tipping over of the transported goods!**

Falling or tipping over of transported goods can cause serious or fatal injuries. Limbs can be crushed.

- Select the lifting device according to the total weight to be transported.
- Secure the machine against tipping over and falling.
- Always attach the machine on all present load handling equipment.
- Do not stand underneath a suspended load.
- Put the goods to be conveyed on a horizontal base (max. inclination: 10° in all directions).

##### 3.1.1 Unpack and check the as-delivered condition

- Unpack the machine on receipt and check for transport damage.
- Immediately notify the manufacturer of transport damages.
- Check the scope of deliveries for completeness.
- Dispose of the packaging in accordance with the local regulations in force.

##### 3.1.2 Lift and transport

**! WARNING**



**Bodily injury resulting from improper operation!**

Improper operation of the lifting gear and the transported goods can cause serious or fatal injuries.

- Lift and transport the machine only on the permissible load handling equipment.
- Loads crosswise to the load handling equipment are not permitted.
- Avoid impact stress.
- Wear your personal protective equipment.



1 Eyebolt

Fig. 1 Load handling equipment for lifting and transporting

The pump is supplied on a pallet.

- a) Unload the pump using a forklift or pallet truck and transport to the installation location.
- b) Tighten the eyebolt (Fig. 1/1) to the head contact.
- c) The machine must be suspended on the eyebolt using the lifting device for lifting.
- d) Lift the pump from the pallet and align.

### 3.2 Storage

#### NOTICE

#### Material damage caused by improper storage!

Improper storage can damage the machine.

- Observe the storage conditions described below.

#### 3.2.1 Ambient conditions during storage

- Dust-free
- In a dry place
- Vibration free
- Protected against sun radiation
- Storage temperature: -10 °C to +60 °C
- Rel. air humidity: max. 80 %
- Close the openings air-tight



The machine must be stored in a dry environment with normal air humidity. It should not be stored for more than 6 months.

📄 See Info "Storage instructions", page 4.

## 4 Product overview and functioning

### 4.1 Product overview C-VLR 62

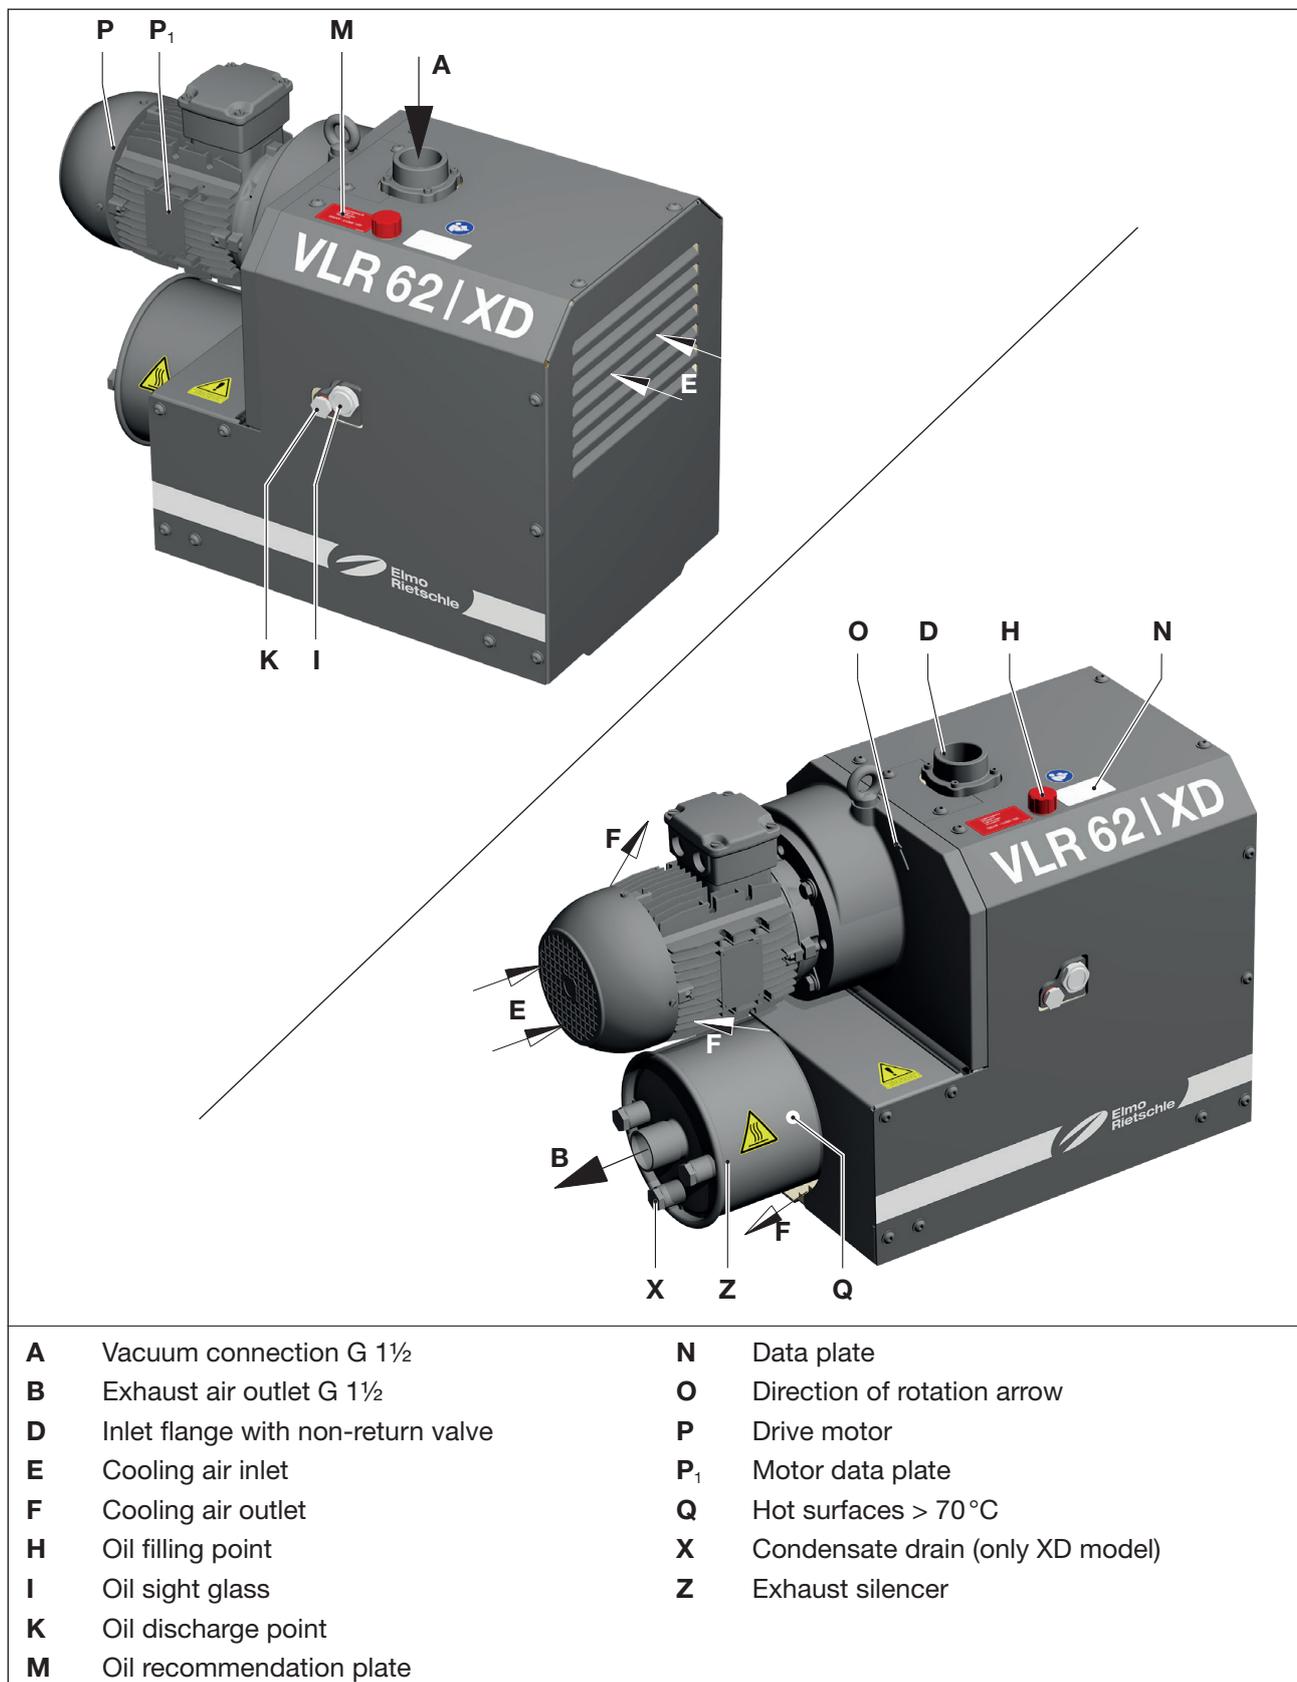


Fig. 2 Vacuum pump C-VLR 62 XD with active cooling (CD is identically structured)

## 4.2 Product overview C-VLR 122


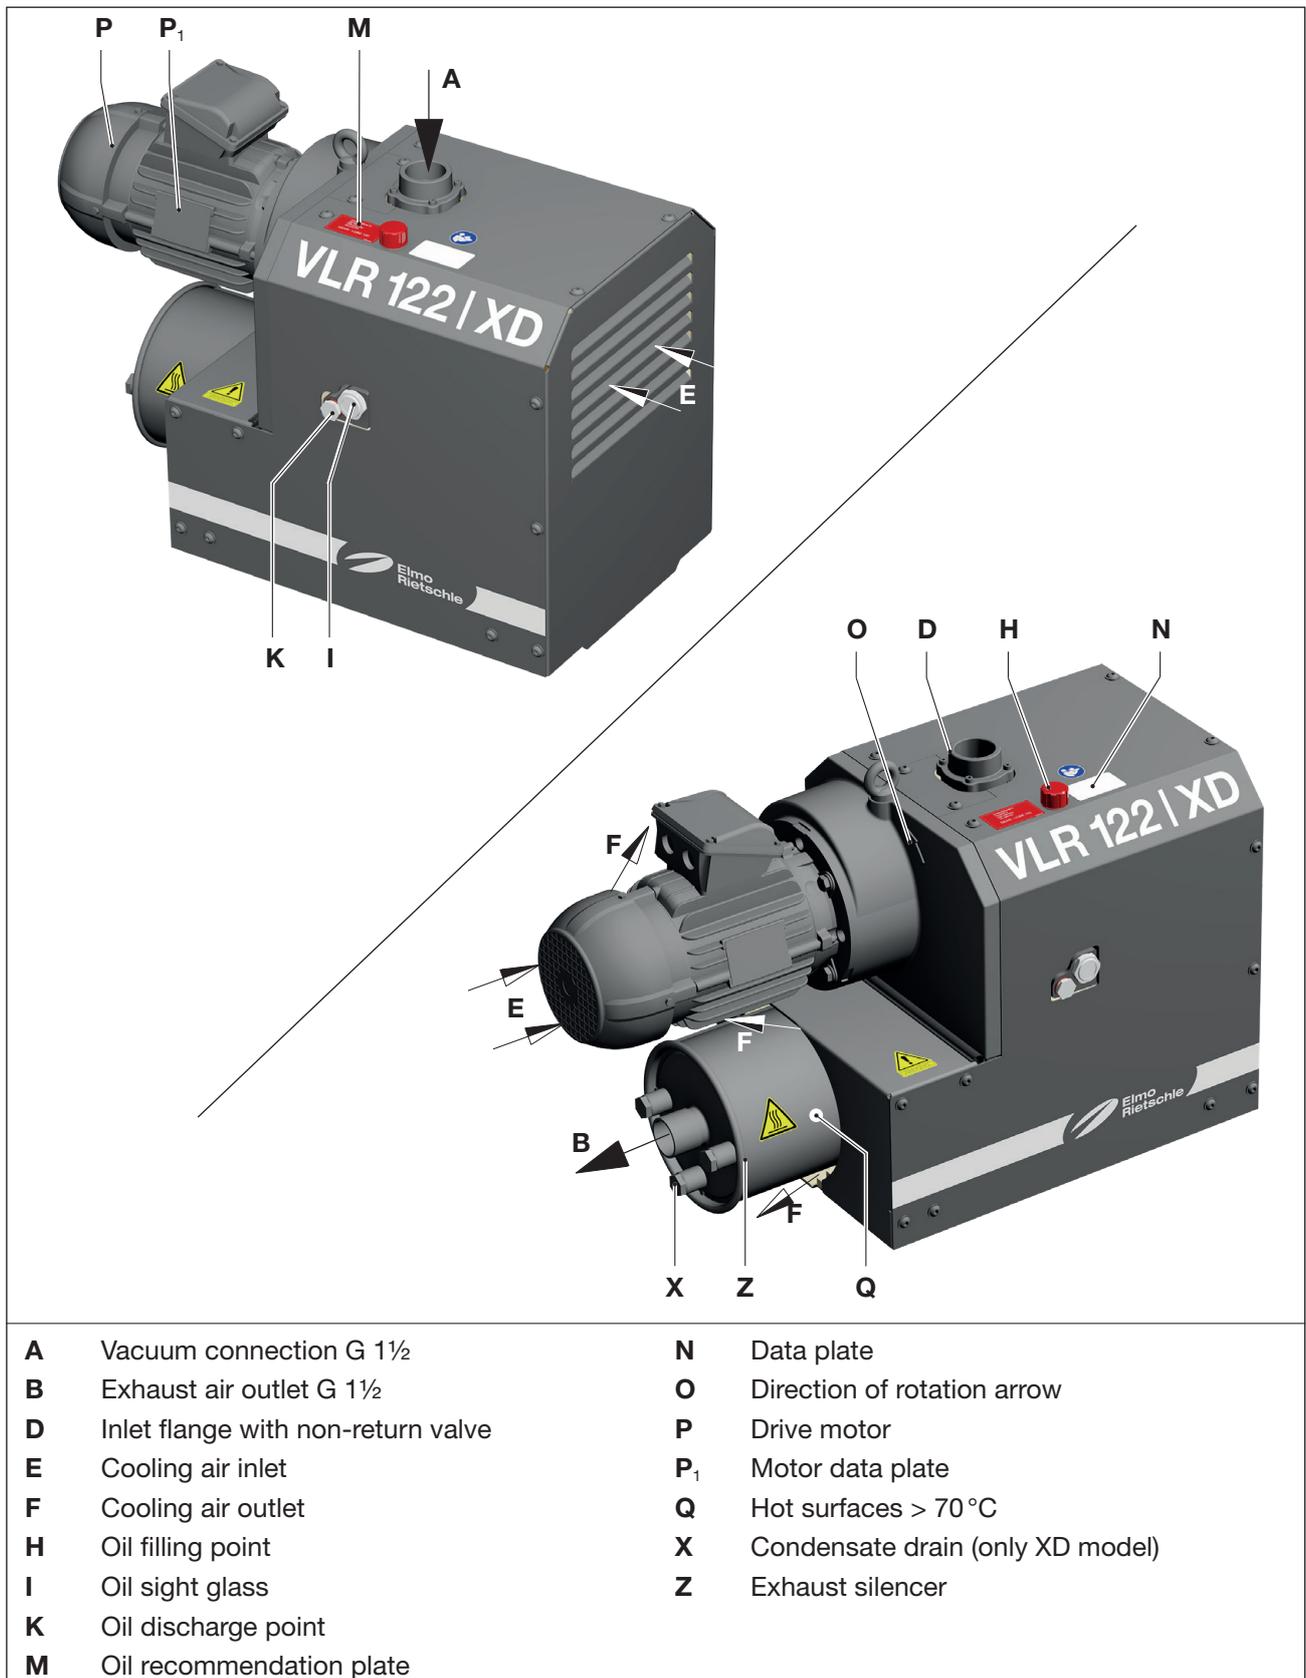


Fig. 3 Vacuum pump C-VLR 122 XD with active cooling (CD is identically structured)

4.3 Product overview vacuum pump with frequency converter

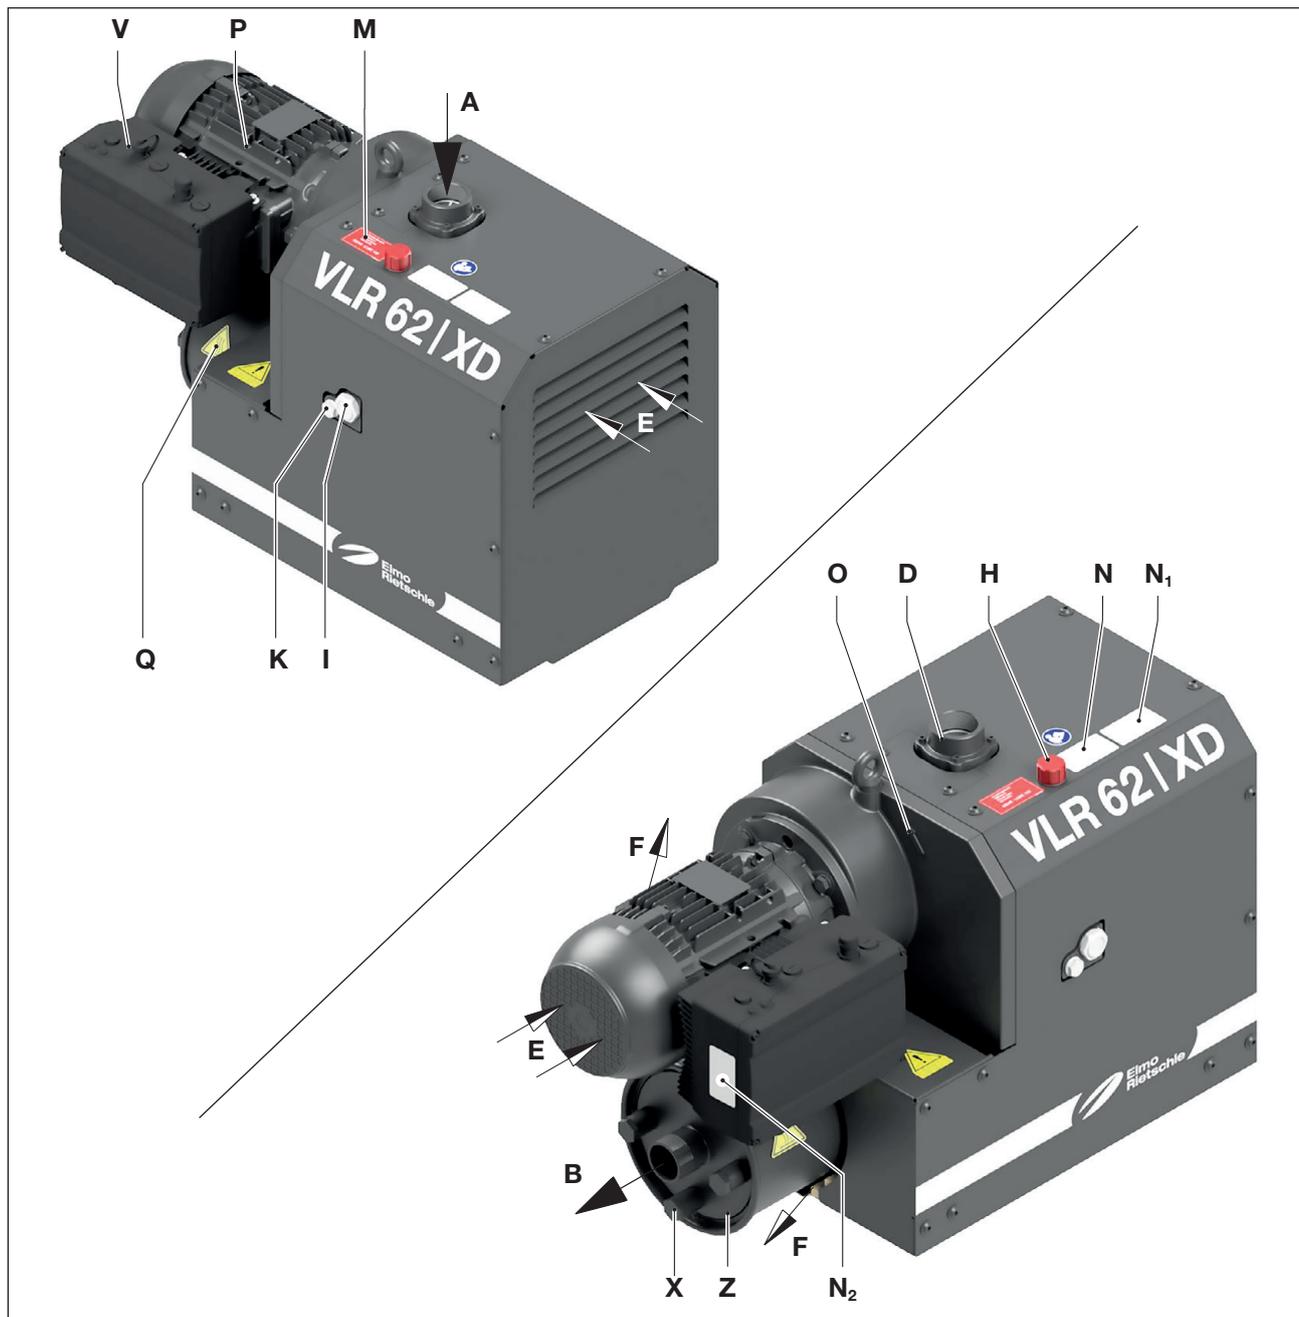

<b>A</b>	Vacuum connection G 1½	<b>N</b>	Data plate 1
<b>B</b>	Exhaust air outlet G 1½	<b>N<sub>1</sub></b>	Data plate 2
<b>D</b>	Inlet flange with non-return valve	<b>N<sub>2</sub></b>	Type plate - frequency converter
<b>E</b>	Cooling air inlet	<b>O</b>	Direction of rotation arrow
<b>F</b>	Cooling air outlet	<b>P</b>	Drive motor
<b>H</b>	Oil filling point	<b>Q</b>	Hot surfaces > 70 °C
<b>I</b>	Oil sight glass	<b>V</b>	Frequency converter
<b>K</b>	Oil discharge point	<b>X</b>	Condensate drain (only XD model)
<b>M</b>	Oil recommendation plate	<b>Z</b>	Exhaust silencer

Fig. 4 Example: Vacuum pump C-VLR 62 XD with active cooling and frequency converter

### 4.4 Data plate

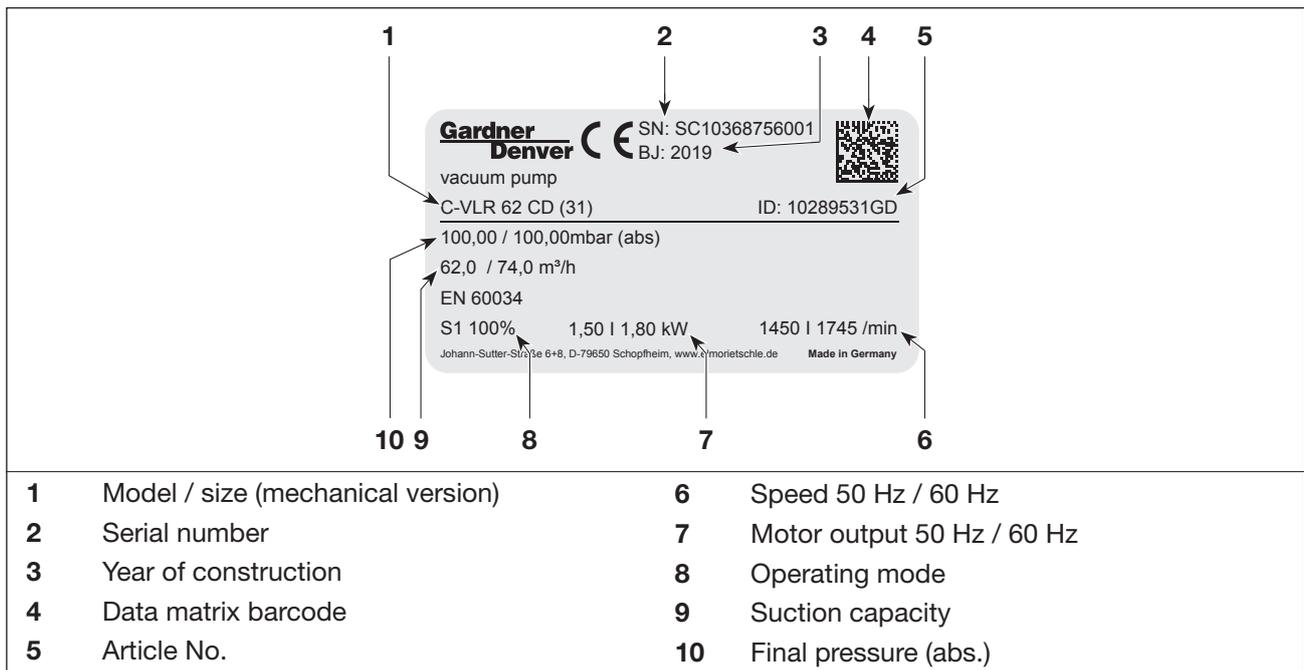


Fig. 5 Data plate for machines without frequency converter

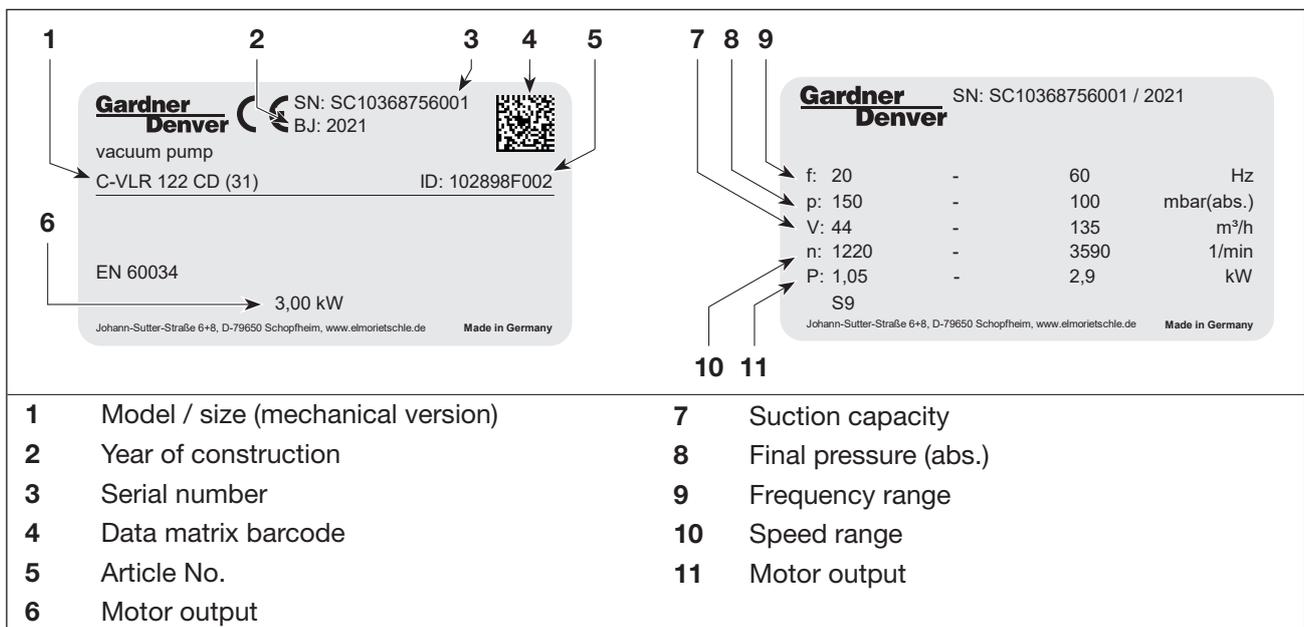


Fig. 6 Data plates for machines with frequency converter

The following information is encoded as barcode:

- Material number (MA)
- Production order (PR)
- Serial Number (SC)

### 4.5 Description

The C-VLR xx2 type with active cooling is a double shaft rotary piston vacuum pump in which the claws roll off against each other contact free and dry. The counter-rotating claw rotors are synchronised by a gear pair in the gearbox. The gears of the synchronized gearbox and the bearings are lubricated with oil. These components are in a gear case that also contains the oil supply. Oil conveying device always ensures that the bearings and the gears are sufficiently supplied with oil at all permissible speeds. The gearbox and the compression chamber are separated from each other by special seals.

The VLR xx2 is enclosed in an insulation hood. In order to dissipate the generated heat away from the compressor, the cooling air is sucked through between the compressor and the hood using a drum fan that sucks in the fresh cooling air (Fig. 2-Fig. 3/E) and discharges the heated air out of the cooling air outlet (Fig. 2-Fig. 3/F). It is driven via a coupling by a flanged, three-phase standard motor.

The VLR xx2 has a connection flange on the inlet side and an exhaust silencer on the pressure side (Fig. 2-Fig. 3/Z). An integral non-return valve prevents the evacuated system from being ventilated after the pump has stopped. This non-return valve includes a mesh filter to avoid damages due to pollution. Depending on the mechanical variant, a vacuum relief valve is integrated in the machine.

In machines with frequency converter, the frequency converter is installed on the motor and allows the infinitely variable control of the speed.

### 4.6 Fields of application

The claw vacuum pumps are suitable for the evacuation of closed systems or for a continuous vacuum within the following inlet pressure ranges: **100 - 1000 mbar (abs.)**

The maximum suction capacity with unrestricted suction is **62 m<sup>3</sup>/h** or **120 m<sup>3</sup>/h at 50 Hz**.

Data sheet **D 882- 31** shows the dependency of the suction capacity on the inlet pressure or **D 882-31-FU** for variants with frequency converter.

XD model: The vacuum pump is equipped with a corrosion-protective coating and is suitable for conveying water-damp gases (water vapour).



If the unit is switched on more frequently (at regular intervals of approx. 10 times per hour) or at higher ambient temperatures and inlet temperatures, excess temperature limit of the motor winding and the bearings may be exceeded.

Contact the manufacturer regarding such operating conditions.



If it is installed in the open air the unit must be protected from environmental influences (e.g. by a protective roof).

### 4.7 Accessories

The following accessories are options and on request available from Gardner Denver.

#### 4.7.1 Intake filter

The intake filter serves for the protection of the machine from dust and other solids in the process gas. The intake filter is available with a paper filter or a polyester filter.

#### 4.7.2 Vacuum relief valve

The vacuum relief valve limits the final pressure of the pump. The vacuum relief valve is set at the factory for the lowest permissible final pressure (see data plate of the pump).

## 5 Installation

We urgently recommend having the installation carried out by qualified specialist personnel. Gardner Denver does not accept liability for damages caused by improper carrying out of installation.

### 5.1 Preparation of installation

Ensure the following conditions:

- Machine freely accessible from all sides
- Do not close ventilation grids and holes
- Sufficient space for installing and removing pipes and for maintenance work, particularly for the installation and deinstallation of the machine
- No influence by external vibrations
- Hot exhaust air from other machines may not be sucked in the cooling system
- Oil filling point (Fig. 2- 3/H), oil sight glass (Fig. 2- 3/I) and oil drain (Fig. 2- 3/K) must easily be available.
- For maintenance works, provide for a space of **at least 50 cm** around the machine.

### 5.2 Installation

#### CAUTION

#### Burns due to hot exhaust gases!

Place the freely blowing machine in a way that hazards due to hot exhaust gases are prevented.

#### NOTICE

#### Property damage caused by improper installation!

Improper erection and installation can damage the machine.

- The machine may only be operated when it is set up horizontally (Max. inclination: 8° in all directions).
- Secure the machine against tipping over and falling.
- The floor must be plane and even.
- The bearing surface must be designed to be able to carry the weight of the machine (see chapter 10 “Technical Data”).
- If a non-return valve is integrated in the pump, it may not be removed.

#### NOTICE

#### Property damage from overheating!

Due to too low cooling capacity, the machine can overheat and can be damaged.

- Ensure for a good aeration and venting of the installation room. Observe the ambient temperature: min. +5 °C, max. +40 °C
- The cooling air inlets and the cooling air outlets must be **at least 30 cm** away from the adjacent walls. Cooling air coming out must not be sucked in again.

- Align the pump at the installation location and if necessary, bolt to the substrate.
- If available, check optional accessories for the correct mounting and correct electrical connection.



An output reduction is noticeable when installed at more than 1000m above sea level. In this case, please contact us.



It is possible to install the machine on a firm base without anchoring. When installing on a sub-structure we recommend fixing it with flexible buffers.

### 5.3 Connection of pipes

#### **CAUTION**

#### **Risk of injury due to closed exhaust air opening!**

Closed, restricted or covered exhaust air openings can cause too high back pressure in the machine.

- The exhaust air opening must not be closed or restricted.
- Do not install any blocking devices.
- Maximum permissible back pressure: +50 mbar  
If the back pressures are higher due to the process, please contact us.
- Prevent liquids from accumulating in the exhaust line.
- Before connecting hose or pipelines, the blind plugs at the exhaust air outlet must be removed.
- Regularly check the connected exhaust lines for pollution.
- Use only suitable pipelines.

#### **NOTICE**

#### **Material damage resulting from too high forces and torques of the pipes acting on the unit!**

If forces and torques during installation and operation are too high, the machine can be damaged.

- Only screw in pipes by hand.
- If necessary, use flexible connections.

The vacuum connection is located on the suction flange.

- a) Remove the blind plug from the vacuum connection (Fig. 2- 3/A) and exhaust air outlet (Fig. 2- 3/B).
- b) Connect the pipes with the vacuum connection (Fig. 2 3/A).
- c) The exhausted air can be blown out through the exhaust air outlet (Fig. 2- 3/B) on the exhaust silencer (Fig. 2- 3/Z) or conducted away using a hose or pipeline.  
To avoid distorting in the piping system, we recommend using compensators.
- d) Check that the maximum back pressure is not exceeded!



The suction capacity of the vacuum pump is reduced if the inlet pipe is too narrow and/or too long.

### 5.4 Check lubricating oil

- a) Check the lubricating oil level through the oil sight glass (Fig. 2- 3/l) and top up, if necessary.
- b) Fill lubricating oil for the gear wheels and bearings in the oil filling point (Fig. 2- 3/H) up to the middle of the sight glass (Fig. 2- 3/l) .  
Please find the suitable types of oil in chapter 7.5 "Lubricating Oil", page 28
- c) Reclose the oil filling points.

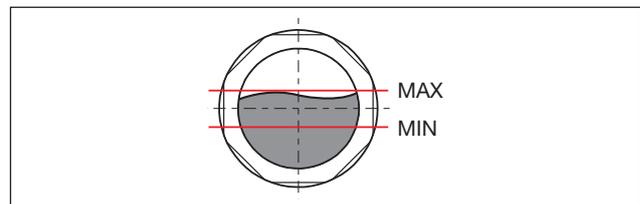


Fig. 7 Oil level in the sight glass

## 5.5 Connect to the energy supply network

### DANGER



#### **Danger to life if the electrical installation has not been carried out professionally!**

Installation that has not been carried out professionally or properly can cause serious injuries or death. The whole electrical system can be destroyed.

- The electrical installation must only be carried out by a qualified electrician observing EN 60204.
- The main switch has to be provided by the user.
- The motor must be safeguarded via a motor protection switch. This must be installed by the operating company.
- Observe the operating instructions of the manufacturer of the frequency converter when operating the frequency converter.

### NOTICE

#### **Property damage due to wrong energy supply!**

Wrong operating voltages, frequencies or currents can cause loss of power or damages to the machine.

- The conditions in the place of installation must comply with the details on the motor data plate or the data plate of the frequency converter.

### 5.5.1 Connect motor, machine without frequency converter

Please find the electrical motor data on the data plate (Fig. 5) or the motor data plate (Fig. 2- 3/P<sub>1</sub>). The motors comply with DIN EN 60034 and are designed in protection class IP 55 and insulation class F. The appropriate connection diagram is located in the terminal box of the motor (not existing for the version with plug connection).

Permissible tolerances:

- ± 5% voltage deviation
  - ± 2% frequency deviation
- a) Compare the motor data with the data of the existing mains network (current type, voltage, network frequency, permitted current value).
  - b) The direction of rotation of the motor must correspond with the direction of rotation arrow (Fig. 2/O) on the motor flange. Check the rotation direction!
  - c) Connect the motor via the motor protection switch.  
For securing, a motor protection switch and a strain relief provide for a screwed cable connection to connect of the connecting cable.



We recommend using motor protection circuit breakers with delayed switch off, depending on a possible excess current. Temporary excess current can occur when the machine is started under cold conditions.

## Installation

### 5.5.2 Connect motor, machine with frequency converter

The drive consists of the motor and the frequency converter. The mechanical and electrical connection between engine and frequency converter has already been established at the time of delivery. The frequency converter is parameterized with the basic settings.

Please find the electrical data on the data plate (Fig. 6, on the right). The electrical power supply values are indicated on the type plate of the frequency converter.

Permissible tolerances:

- Input voltage: 3~ AC , 400 V -15 % to 480 V +10 %
  - Input frequency: 47 to 63 Hz  $\pm$  0 %
  - Appropriate network configurations: TN / TT
- a) Compare the motor data with the data of the existing mains network (current type, voltage, network frequency, permitted current value).
  - b) Connect the frequency converter (Fig. 4/V) according to the operating instructions or the enclosed pin configuration.  
Use suitable cable fittings or fasteners to comply with the protection class (IP 65).

## 6 Commissioning and decommissioning

### 6.1 Start-up

#### WARNING

##### **Risk of injury due to improper operation!**

Improper operation of the machine can cause serious or fatal injuries.

- Strictly observe the safety instructions. Especially observe the safety instructions in chapter 2 .

#### CAUTION

##### **Risk of burns on hot surfaces!**

When the machine is at operating temperature the surface temperatures on the components may rise to above 70 °C. This can cause serious burns.



- Do not touch hot surfaces (indicated by warning signs).
- Wear suitable protective gloves, if necessary.

#### CAUTION

##### **Risk of injury due to drawing in and trapping!**

Due to the high suction capacity possibly parts of the body are drawn in the inlet connection and injured.

- Do not put your hands onto the inlet connection to check the suction.
- By barriers or keeping sufficient distance make sure that parts of the body can be drawn into the inlet connection.

#### CAUTION

##### **Risk of injury due to noise emission!**

High sound pressure level can permanently damage hearing.



- Observe measured sound pressure level, see chapter 10.
- When spending a long time in the vicinity of the running machine use ear protection to avoid permanent damage to hearing.

#### NOTICE

##### **Property damage due to insufficient cooling!**

If the cooling air flow is reduced or interrupted, cooling of the machine cannot be ensured. This can cause reduced performance or blackout failure of the machine and damage the machine.

- Operation is only allowed with sufficient cooling air quantity.
- Make sure that the cooling air flow is not interrupted.

## Commissioning and decommissioning

### 6.1.1 Installation check



#### Risk of injury!

A faulty installation as well as missing or non-functional safety equipment may lead to severe injury.

- Put the vacuum pump into operation only after it has been ensured that the installation is carried out flawlessly and the requirements for installation, assembly and electrical installation have been observed.

The following checks must be carried out:

- no transport or assembly damage of the vacuum pump and assembly steps attached
- the vacuum pump is standing safely on the substrate at a horizontal installation position
- Correct connection of the pipelines (inlet side, outlet side), check for leak tightness!
- Tight fit of the screw and flange connections
- Electrical installation complies with the specifications (connection diagram)
- The installation room is equipped with an adequate ventilation system
- Oil filled and oil level checked
- vacuum pump and pipelines cleaned
- check the function of optional accessories (if present)

### 6.1.2 Check the rotation direction



#### Risk of injury due to wrong direction of rotation!

Rotating backwards for a longer time can cause injuries due to drawing in and can damage the machine.

- Use a phase sequence indicator to check the direction of rotation (**clockwise**).
- Keep a distance of 1 m to outlet and inlet connections.

The drive shaft direction of rotation is shown by the arrow for the direction of rotation (Fig. 2- 3/O) on the motor flange.

- a) Start the motor briefly (max. two seconds) to check the direction of rotation. When looking at the motor blower, it must rotate counter-clockwise.

## 6.2 Operation

### 6.2.1 Discharge condensate



#### Risk of injury due to hot condensate!

If condensate is discharged manually, this can cause burns.

- Do not discharge the condensate manually.
- If there are any condensate drains on the machine, allow the machine to cool down before drain off the condensate.  
XD model:  
Depending on application, regularly discharge the condensate from the silencer through the condensate drain.
- Wear protective gloves.

**NOTICE****Property damage due to formation of condensate and impurities!**

Due to increased condensate formation and impurities, deposits may adhere to the rotors and the compressor casing after switching off the machine, preventing the start-up when restarting it. Condensate and impurities can cause damage to the machine.

- Before the decommissioning of the machine, drain off the condensate.

Before putting the pump out of operation for more than 2 hours or before decommissioning of the vacuum pump, remove moisture and pollution from the pump by running the vacuum pump at **700 mbar (abs.)** for at least **15 - 30 minutes** with dry air.



Depending on the use case, we recommend leaving the vacuum pump running after with purging gas.  
Contact the manufacturer regarding such operating conditions.

**6.3 Decommissioning****6.3.1 Decommissioning of the machine****DANGER****Danger of death from touching live parts!**

Touching of live parts cause serious injuries or death.



- Disconnect the machine from the power supply by actuation of the main switch or disconnection of the plug and secure it against unexpected restart.
- Works on the electrical installation must be carried out by an electrician only.

**CAUTION****Risk of injury due to hot surfaces!**

When the machine is at operating temperature the surface temperatures on the components may rise to above 70 °C. This can cause burns.



- Avoid touching the hot surfaces. They are marked by warning signs.
- Wear suitable protective gloves, if necessary.

- a) Drain condensate and let the pump run with dry air for a while. See chapter 6.2.1
- b) Switch the machine off and allow it to cool down.
- c) If available, close the cut-off device in the suction and pressure line.
- d) Disconnect the machine from the power supply.
- e) Depressurise the machine: Open the pipes slowly.  
⇒ The pressure reduces slowly.
- f) Remove the pipes and hoses.
- g) Seal the connections for inlet and outlet stubs using adhesive foil.

**6.3.2 Storing the machine**

📖 See also chapter 3.2, page 13

**6.4 Recommissioning**

- a) Check the condition of the machine (cleanliness, cabling etc.).

📖 For installation see chapter 5, page 19

📖 For commissioning see chapter 6, page 23

## 7 Maintenance and repair

### DANGER



#### **Danger of death from touching live parts!**

Touching of live parts cause serious injuries or death.

- Before starting any maintenance work, disconnect the machine by actuation of the main switch or disconnection of the plug and secure it against accidental switching.
- Works on the electrical installation must be carried out by an electrician only.
- Repair works are only allowed to be done by authorised specialists.
- Observe the operating instructions of the manufacturer of the frequency converter when operating the frequency converter.

### CAUTION



#### **Risk of injury due to hot surfaces!**

When the machine is at operating temperature the surface temperatures on the components may rise to above 70 °C. This can cause burns.

- Wait for the machine to cool down.
- Before maintenance and repair works allow the machine to cool down.
- Wear suitable protective clothes, if necessary.

### CAUTION

#### **Risk of injury due to missing safety devices!**

Missing safety devices can cause injuries.

- Safety devices as well as safety guards on motor fans and ventilators may not be removed.

### 7.1 Ensure operational safety

Regular maintenance work must be carried out in order to ensure operational safety.

The cleaning and oil change intervals strongly depend on how the machine is loaded (operating time, operating conditions, etc.) and the type of oil used. Depending on the pollution of the sucked in medium and the environmental conditions, the cleaning intervals of the air filters can be shorter. Extreme temperatures or pollutions can reduce the lifetime of the oil to 5,000 operating hours. The specified interval of up to 20,000 operating hours only applies to types of oil delivered or approved by Elmo Rietschle.

For all works, observe the safety instructions described in chapter 2 “Safety” .

The whole plant should always be kept in a clean condition.

## 7.2 Maintenance table

Interval (Operating hours)	Maintenance activities	Chapter
At least 1 x per month	Check the pipes and screws for leaks and ensure their tight fit and if necessary re-seal or re-tighten.	—
	Check the terminal box and cable inlet holes for leaks and if necessary re-seal.	—
	Clean the ventilation slots on the machine and the motor cooling ribs.	—
	Check the oil level	7.5.1
	Check, clean, and replace the air filters, if necessary	7.6
Depending on the degree of pollution	Clean vacuum pump	7.4
Depending on condensation	Drain the condensate from the silencer (XD model)	6.2.1
20,000 h	Oil change	7.5.2
At least 1 x per year	Check couplings for wear	7.7.2
As per manufacturer's instructions	Motor (maintenance, lubrication and cleaning)	7.7.1
	Frequency converter	7.8
40,000 h	General overhaul of the machine (Elmo Rietschle Service)	—

Tab. 1 Maintenance table

## 7.3 Preparing maintenance works

- a) Switch the plant off electrically and secure it against unexpected restart.
- b) Vent the vacuum pump with atmospheric air; for this purpose open the shut-off valve.  
Exception: Clean the outside of the vacuum pump
- c) Allow the vacuum pump to fully cool down.  
Exception: Oil change, here the pump shall be still warm, because oil can then flow off better.
- d) Post the warning sign "Caution, maintenance works!".

## 7.4 Clean vacuum pump

The vacuum pump must regularly be checked for dust deposits and cleaned, if necessary. The cleaning interval depends on the operational requirements.

- a) Clean the vacuum pump with a damp cloth or using a vacuum cleaner. Remove dust deposits:
  - Pump housing
  - Between the cooling ribs of the motor
  - On the silencer and the piping
  - On the accessories attached

## 7.5 Lubricating Oil

**CAUTION**



**Risk of burns on hot equipment!**

There is the risk of burning on hot equipment when changing oil.

- Allow the machine to cool down to approx. 40 °C (lukewarm).
- Avoid contact with the hot oil because the oil temperature can be higher than the ambient external temperature of machine.
- Wear suitable protective gloves, if necessary.

**CAUTION**



**Risk of injury due to slipping and falling!**

The floor can be slippery due to leaked oil and cause slipping, tripping or falling.

- For oil change wear non-slip shoes.
- Remove leaked oil immediately.



Always change the oil when the machine is at operating temperature and in an atmospherically ventilated area. If it is not completely emptied, the refilling quantity is reduced.

If you change the type of oil, empty the oil tank completely.

A minimum oil quantity may escape from the vent screw due to pressure compensation. If larger quantities of oil escape, wash the internal filter of the vent screw.



The waste oil must be disposed of in compliance with the local environmental protection regulations.

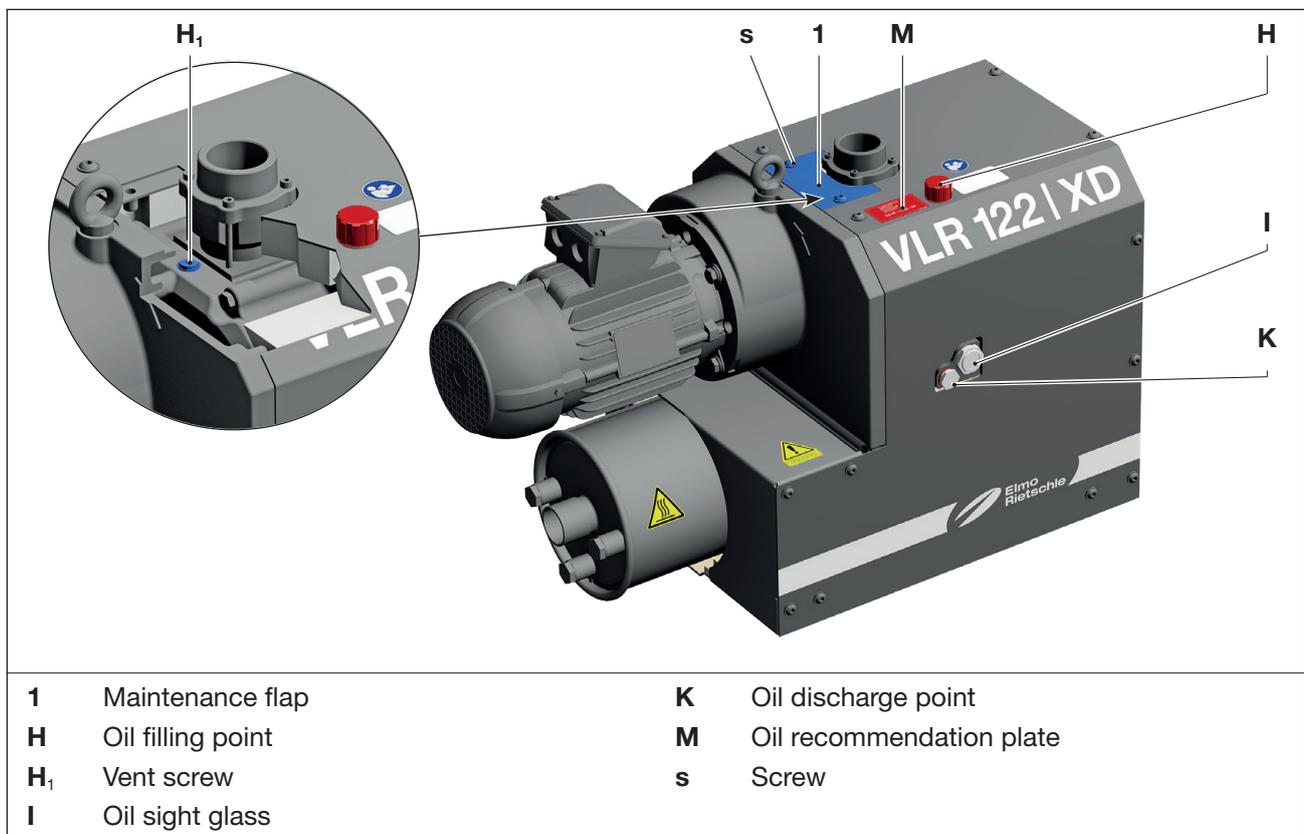


Fig. 8 Oil change

We recommend using Elmo Rietschle oils:

GEAR-LUBE 150: Synthetic oil, highly loadable with high resistance to aging and with excellent wear protection

The viscosity of the oil used must comply with ISO VG 150 as per DIN 3448.

Also consider the safety data sheet of the oil type used.

If you want to change the oil type, please contact us.

### 7.5.1 Check/refill oil level

Check the oil level in the sight glasses (Fig. 8/l) every month.

- a) Switch the machine off, secure it against accidental switching on and vent to atmospheric pressure.
- b) Remove two screws (Fig. 8/s) on the maintenance flap (Fig. 8/1) and remove the maintenance flap.
- c) Open the vent screw (Fig. 8/H<sub>1</sub>).
- d) Open the cap of the oil filling point (Fig. 8/H) and refill oil until it reaches the upper edge of the sight glass (Fig. 8/l).
- e) Close the oil filling point and vent screw.
- f) Re-install the maintenance flap.

### 7.5.2 Oil change

Change oil after every 20000 operating hours.

- a) Switch the machine off, secure it against accidental switching on and vent to atmospheric pressure. Let the pump cool down.
- b) Remove two screws (Fig. 8/s) on the maintenance flap (Fig. 8/1) and remove the maintenance flap.
- c) Open the vent screw (Fig. 8/H<sub>1</sub>), open the oil discharge point (Fig. 8/K) and completely discharge the used oil.
- d) Close the oil discharge point (Fig. 8/K) and fill in new oil through the oil filling point (Fig. 8/H). Check the oil level in the sight glasses (Fig. 8/l).
- e) Close the oil filling point and vent screw.
- f) Re-install the maintenance flap.

## 7.6 Air filter

### CAUTION



#### Danger of injury when dealing with compressed air!

When the filter is blown off with compressed air, loose solid particles or powder dust swirling around may cause injury to the eyes. Inhaling can damage lungs.

- Wear protective glasses and dust mask when cleaning the filter with compressed air.

### NOTICE

#### Property damage due to insufficient maintenance of the air filter!

Performance of the machine is reduced by a polluted air filter and insufficient maintenance. This can cause damage of the machine.

- Regularly check and clean the integrated air filters.
- Replace highly polluted or damaged air filters.

### 7.6.1 Mesh filter

#### NOTICE

#### Property damage!

Loose parts can damage the rotors and cause machine failure.

- During disassembly/assembly of the inlet flange make sure that not parts fall into the machine.
- Remove loose parts from the machine. If in doubt, do not put the machine into operation again. In such cases, please contact our Service department.

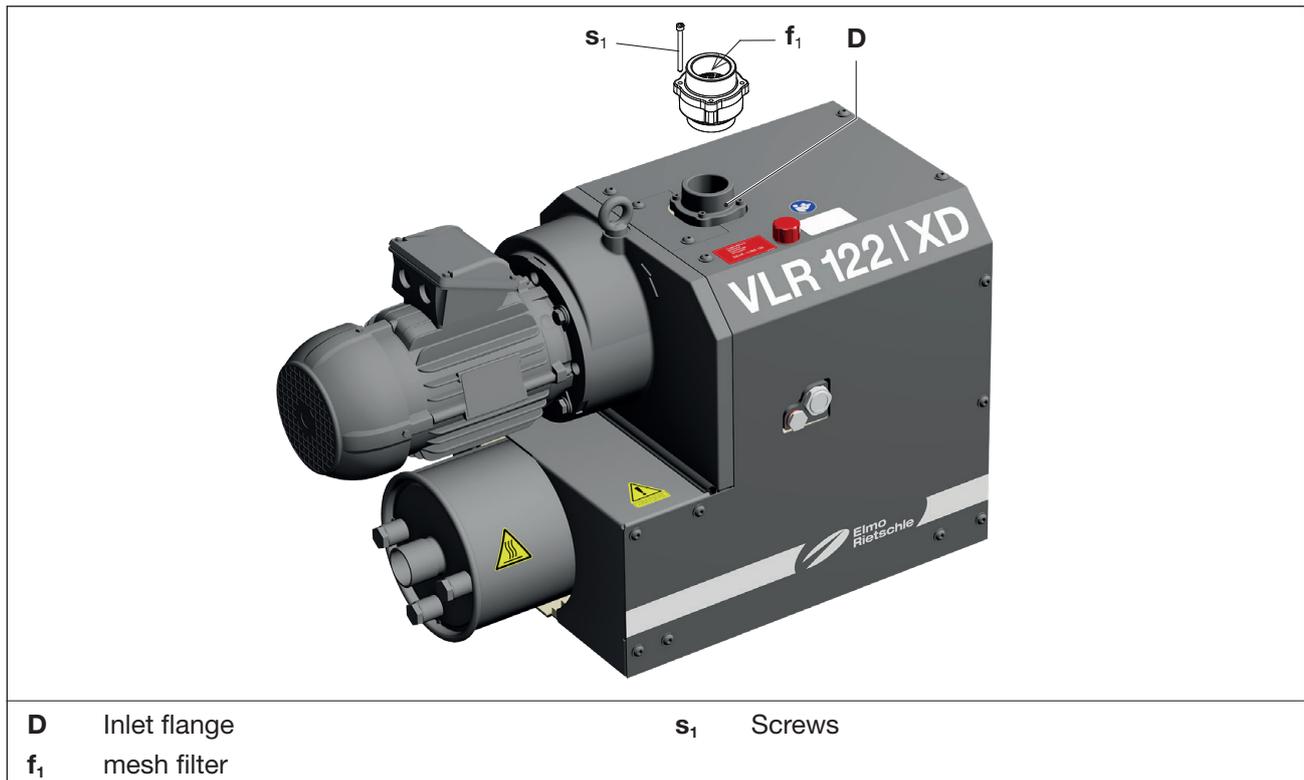


Fig. 9 Mesh filter

Clean or replace the mesh filter by washing or blowing off every month, or more often depending on the pollution of the sucked in medium.

- Switch the machine off, secure it against accidental switching on and vent to atmospheric pressure. Let the pump cool down.
- Take off the inlet flange (Fig. 9/D) after releasing the screws (Fig. 9/s<sub>1</sub>).
- Clean the mesh filter (Fig. 9/f<sub>1</sub>). Also check the valve seat for contamination.
- Remount the inlet flange (Fig. 9/D) and retighten the screws.

### 7.6.2 Intake filter (accessories)

Clean the filter cartridge of the intake filter every month or more often, depending on pollution, by blowing off from the inside to the outside.

In spite of cleaning the filter its separation efficiency will continue to deteriorate. Therefore the filter should be replaced every six months.

- Switch the machine off, secure it against accidental switching on and vent to atmospheric pressure. Let the pump cool down.
- Release the brackets (Fig. 10/m<sub>2</sub>) on the filter cover (Fig. 10/g<sub>2</sub>).
- Remove the filter cartridge (Fig. 10/f<sub>2</sub>) from the filter and clean or replace.

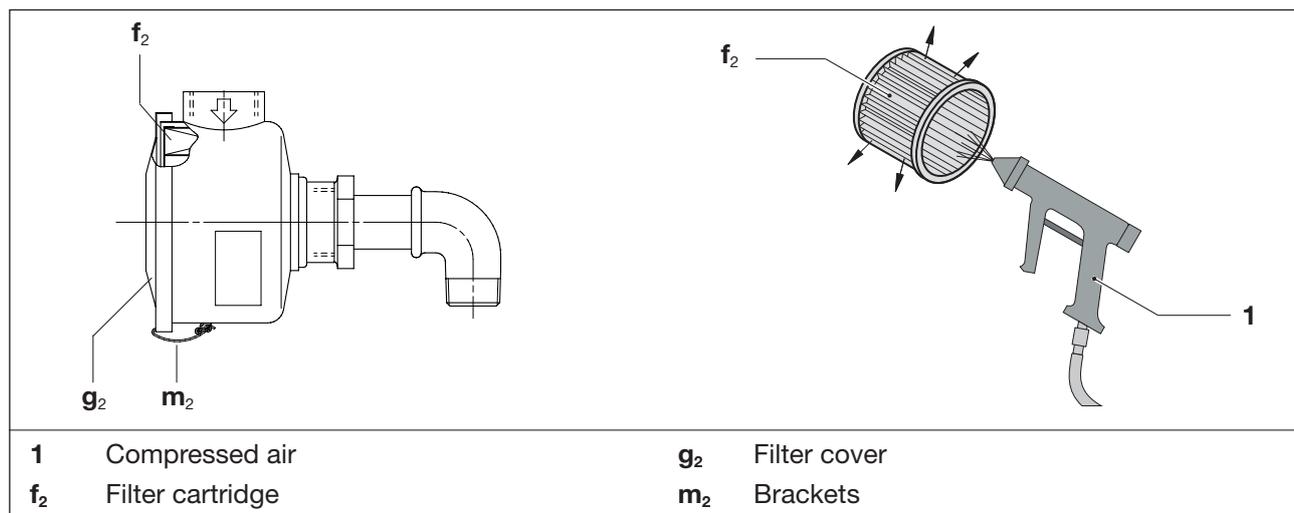


Fig. 10 Intake filter

d) Re-insert the filter cartridge in the filter and fasten the filter cover (Fig. 10/g<sub>2</sub>) with the brackets (Fig. 10/m<sub>2</sub>).

## 7.7 Motor and coupling

### 7.7.1 Motor



Perform the maintenance of the motor in accordance with the manufacturer's operating and maintenance instructions.

### 7.7.2 Coupling

#### NOTICE

#### Property damage due to defective coupling sprocket!

Defective sprockets can cause breaking of the rotor shaft and blackout failure of the machine.

➤ Regularly check the coupling tooth for wear.

#### NOTICE

#### Property damage due to frequent starting and high ambient temperature!

Frequent starting and high ambient temperature reduces the lifetime of the sprocket.

➤ Regularly check the coupling tooth for wear.

The coupling sprocket (Fig. 11/q) is subject to wear and must be checked regularly (at least 1 x per year). The fan (Fig. 11/v) should also be checked for damage from time to time.

- Switch the machine off, secure it against accidental switching on and vent to atmospheric pressure. Let the pump cool down.
- Hang the motor (Fig. 11/m) in the transportation lashing using a hoisting gear.
- Release the screws (Fig. 11/s<sub>5</sub>) on the motor flange and axially pull the motor with the half of the coupling on the motor side (Fig. 11/k) off the fan housing (Fig. 11/n<sub>2</sub>).
- Check the sprocket (Fig. 11/q). If the sprocket is damaged or worn, replace it.
- Check the fan (Fig. 11/v) and replace it, if necessary.
- Axially push on the gear rim and motor with coupling half on the motor side again and fix to the motor flange using the screws (Fig. 11/s<sub>5</sub>).
- Remove the lifting gear from the motor.

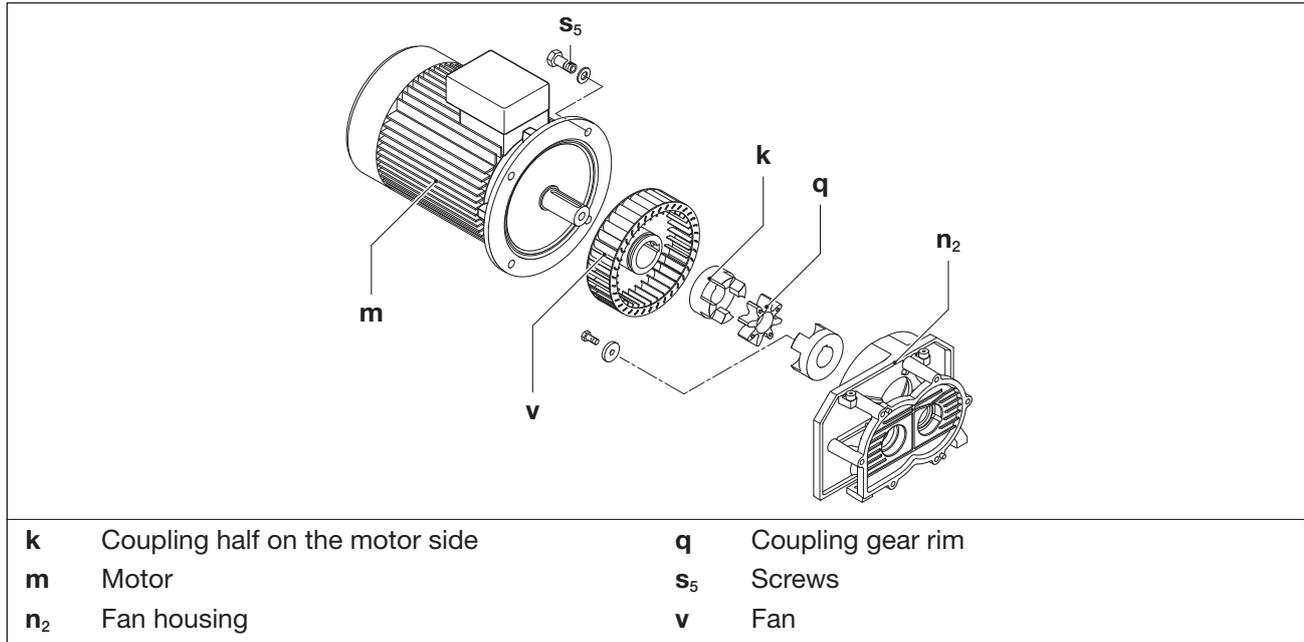


Fig. 11 Coupling

## 7.8 Frequency converter



Perform the maintenance of the frequency converter in accordance with the manufacturer's operating and maintenance instructions.

Please find the operating instructions in the following link:

<https://www.kostal-industrie-elektrik.com/de-de/downloads/downloadmanager/#Antriebstechnik/INVEOR%20M%3A%20Motormontierte%20Antriebsregler/>

## 7.9 Repair / service

For repairs contact the manufacturer, its branch offices or authorised dealers.

Please contact the manufacturer for the address of the authorized service centre (see manufacturer's address at the rear side).



### WARNING

#### Risk of injury due to substances hazardous to health!

Due to contamination with hazardous substances and operating agents during operation, there is a high health risk for the repair personnel.

- For each machine that is sent to an Elmo Rietschle Service centre for inspection, maintenance or repair, a fully completed, signed declaration of harmlessness must be enclosed.  
The Declaration of No Objection is part of the supplier's documentation.
- Before returning, properly clean the machine.

After a repair or re-commissioning, the actions listed in chapter 5 "Installation" and chapter 6 "Commissioning and decommissioning" are to be performed as in the first commissioning.

## 7.10 Spare parts

**NOTICE****Property damage due to wrong or defective spare parts!**

Wrong or defective spare parts can cause malfunctions or blackout failure of the machine.

- Only use original spare parts or parts approved by the manufacturer.
- The use of other parts may revoke liability or guarantee for any resulting consequences.

**Order spare parts according to:**

- **List of spare parts: E 882-31** → C-VLR 62 | 122 active cooling
  - Download the PDF-file: <http://www.gd-elmorietschle.com>  
→ Downloads

Wearing parts and sealings are separately listed.

## 8 Errors



### Danger to life!

If malfunctions are disregarded and/or removed only insufficiently, serious to lethal injuries can occur.

- Never put the pump in operation again after it has been switched off automatically without unequivocally finding out the reason for this shut-off and remedying it.

Malfunction	Cause	Elimination	Note
Machine is switched off by the motor protection switch	Mains voltage/ Frequency does not correspond with the motor data	Check by qualified electrician	Chapter 5.5
	Connection to motor terminal board is not correct		
	Motor protection switch is not set correctly		
	Motor protection switch is triggered too quickly	Use a motor protection switch with an overload-dependent turn-off delay that considers the short excess current at start up (version with short circuit and overload trigger as per VDE 0660 Part 102 or IEC 60947-4-1)	
Machine does not start or the frequency converter displays an error message	Malfunctions in the integrated frequency converter	See Operating Instructions of frequency converter	Chapter 7.8
Suction capacity is insufficient	Air filter is polluted	Clean/replace air filter	Chapter 7.6
	The inlet pipe is too long or too narrow	Check the hose and/or the pipe	Chapter 5.3
	Machine or system leaking	Check the pipework and screw connections for leaks and check for tight fit	Chapter 5.3
Final pressure (max. vacuum) is not reached	Machine or system leaking	Check the pipework and screw connections for leaks and check for tight fit	Chapter 5.3
	Air filter is polluted	Clean/replace air filter	Chapter 7.6
Machine gets too hot	Ambient or inlet temperatures too high	Ensure proper use	Chapter 2.4
	Cooling air supply is obstructed	Check ambient conditions	Chapter 5.1
		Clean ventilation slots	Chapter 7.4
The machine makes a strange noise	Deposits on the rotary piston	Clean the working space and the rotary piston	Elmo Rietschle Service

Tab. 2 Table of malfunctions



Please contact Elmo Rietschle Service for other malfunctions or those that cannot be eliminated.

### 9 Disassembly and disposal

#### 9.1 Disassembly



#### WARNING

#### Risk of injury due to substances hazardous to health!

Due to contamination with hazardous substances and operating agents during operation, there is a high health risk for the personnel.

- Before disassembly, properly clean the machine.
- Wear suitable protective clothing.

- a) Put the machine out of service according to chapter 6.3.
- b) Disassemble the machine.  
Dismantle large components and assemblies.

#### 9.2 Disposal

#### NOTICE



#### Damage to the environment!

Environmental damage may be caused by the incorrect disposal of operating material and materials.

- All operating materials, as well as all liquids, such as cooling water and cooling oil, required during operation and maintenance, must be collected and disposed of in an environmentally friendly manner.
- Separate components according to the materials and if possible, recycle.

- a) Collect oils and grease separately and dispose of in accordance with the local regulations in force.
- b) Do not mix solvents, cold cleaning agent and paint residues.
- c) Remove components and dispose of them in accordance with the local regulations in force.
- d) Dispose of the machine in accordance with the national and local regulations in force.
- e) Parts subject to wear and tear (marked as such in the spare parts list) are special waste and must be disposed of in accordance with the national and local waste laws.

## 10 Technical Data

### 10.1 Variants without frequency converter

C-VLR			62	122
Sound pressure level (max.) EN ISO 3744 Tolerance ±3 dB(A)	dB(A)	50 Hz	68	76
		60 Hz	70	76
Sound power level	dB(A)	50 Hz	77	84
		60 Hz	77	86
Weight *	kg		114	121
Length *	mm		739	770
Width	mm		372	372
Height	mm		500	500
Vacuum connection			G 1 ½	
Oil filled volume	l		0.43	
Rated voltage 3~	V	50 Hz	230 / 400 V ± 10 %	
		60 Hz	265 / 460 V ± 10 %	460 ± 10 %
Current consumption	A	50 Hz	5.47 / 3.15	9.68 / 5.57
		60 Hz	5.56 / 3.21	5.19
Motor output	kW	50 Hz	1.5	2.7
		60 Hz	1.8	3.0

\* Length and weight may differ from the information listed here depending on the motor manufacturer.

Please find more technical data in the data sheet **D 882-31**.

- Download the PDF file: <http://www.gd-elmorietschle.com>  
**D 882-31** → C-VLR 62 | 122 active cooling



Subject to technical changes!

10.2 Variants with frequency converter

C-VLR (Fxxx)		62	122
Sound pressure level (max.) EN ISO 3744 , Tolerance ± 3 dB(A)	dB(A) 60 Hz	73	80
Sound power level	dB(A) 60 Hz	83	91
Weight	kg	121	125
Length	mm	770	
Width	mm	372	
Height	mm	500	
Vacuum connection		G 1 ½	
Oil filled volume	l	0.43	
Mains voltage 3~	V	400 V -15 % – 480 V +10 %	
Mains current	A	6.2	
Motor output	kW	1.8	3.0

Please will find more technical data in the data sheet **D 882-31-FU** and **610.00260.02.840**

- Download der PDF file: <http://www.gd-elmorietschle.com>  
**D 882-31-FU** → C-VLR 62 | 122 Active cooling with frequency converter  
**610.00260.02.840** → Frequency converter



Subject to technical changes!





**Elmo  
Rietschle**

[www.gd-elmorietschle.com](http://www.gd-elmorietschle.com)  
[er.de@irco.com](mailto:er.de@irco.com)

---

**Gardner Denver**  
**Schopfheim GmbH**  
Johann-Sutter-Straße 6+8  
79650 Schopfheim · Germany  
Phone +49 7622 392-0  
Fax +49 7622 392-300

**Gardner**  

---

**Denver**

Elmo Rietschle is a brand of  
Gardner Denver's Industrial Products  
Division and part of Blower Operations.